




Summary

The Electro-Mech Wireless Handheld Play Clock Switch Assembly is an accessory which works with an MP-style control console outfitted with an embedded ScoreLink Transmitter and the appropriate software. This handheld unit allows an official to walk the field while starting, stopping, and resetting the Play Clock time.

Buttons and Indicators

Running Indicator Light = Illuminates solid green when the Play Clock is counting down.

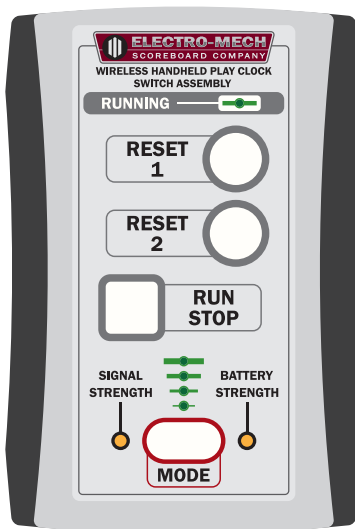

Reset 1 = Put 40 seconds on the Play Clock display.

Assign any number from 1 to 99 to this button through the main console.

Reset 2 = Put 25 seconds on the Play Clock display.

Assign any number from 1 to 99 to this button through the main console.

Run / Stop = Start the Play Clock countdown or stop it.

To blank the Play Clock display, press and hold this button for a few seconds.

Mode = Toggle between checking the battery strength or signal strength.

Press and hold this button to put the handheld unit in low power mode.

Press again to resume normal operation.

Battery Strength Indicator Light = Illuminates solid amber while the green

Strength Bar Indicators display the handheld unit's battery strength. This LED will blink on once every five seconds when the batteries need to be replaced. It will illuminate briefly when the device powers up fully.

Signal Strength Indicator Light = Illuminates solid amber while the green Strength Bar Indicators display the handheld unit's signal strength. This LED will blink once every two seconds when the handheld unit is unable to find a ScoreLink server. It will illuminate briefly when the device powers up fully.

Strength Bar Indicator Lights = Illuminate solid green as strength increases; more lights means more strength.

Batteries

The Play Clock Switch Assembly requires two AA batteries to power it for wireless operation. These can be standard alkaline batteries or rechargeable batteries. Either style should provide over 20 hours of operation on a fresh charge. You cannot recharge batteries inside the handheld unit.

Electro-Mech's wireless switch assemblies are designed to conserve battery power when they are not active. The units drop into a lower power mode when they are unable to detect the presence of a ScoreLink server for several minutes. You can manually activate this low power feature by holding the [MODE] button for about five seconds. However, the internal electronics continue to drain the batteries slightly. We recommend removing the batteries if the units will not be used for a few days.

