

ELECTRO-MECH SCOREBOARD CO.

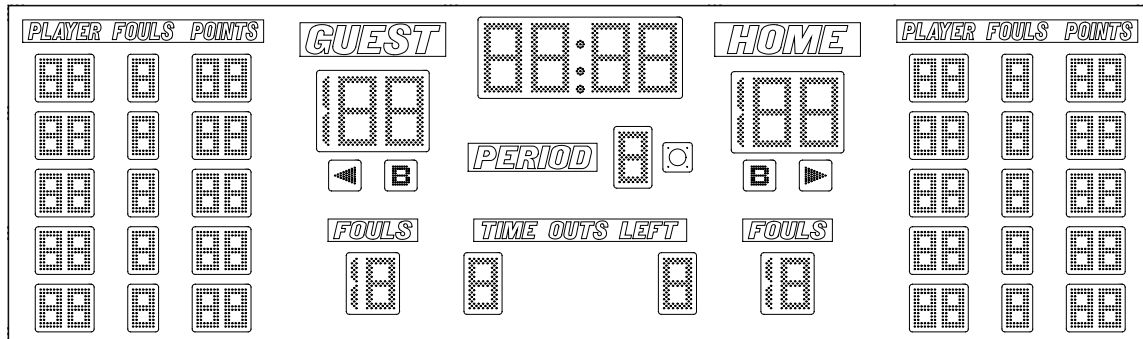

MODEL 2555 BASKETBALL SCOREBOARD

OWNER'S HANDBOOK

Thank you for choosing an Electro-Mech Scoreboard for your athletic complex. We are confident that your new scoreboard will give many years of reliable service.

Rev. 3B Revised: 2014-April-23

TABLE OF CONTENTS

| | |
|--|-----------|
| 2555 BASKETBALL SCOREBOARD SPECIFICATIONS..... | 3 |
| SCOREBOARD INSTALLATION | 4 |
| MECHANICAL INSTALLATION..... | 4 |
| Mounting the Scoreboard..... | 5 |
| ELECTRICAL INSTALLATION..... | 6 |
| Power Connection | 6 |
| ScoreLink RF Modem Kit..... | 6 |
| Control Cable Installation..... | 7 |
| Control Console Connections..... | 8 |
| Control Console Safety Warning..... | 8 |
| Goal Lights Installation..... | 8 |
| Installation of Two or More Scoreboards at the Same Site | 8 |
| SCOREBOARD OPERATION..... | 9 |
| SCOREBOARD STARTUP..... | 9 |
| GAME TIME OPERATION..... | 9 |
| 2550 Control Console Key Functions..... | 11 |
| Horn and Goal Lights Operation | 14 |
| Hand Held Clock Control Unit Operation | 14 |
| 2055 Control Console Key Functions..... | 16 |
| SCOREBOARD SHUTDOWN..... | 18 |
| SERVICING THE SCOREBOARD..... | 19 |
| COMPONENT REPLACEMENT | 19 |
| LED Digits And Indicators Replacement | 19 |
| Horn Replacement | 20 |
| LED Driver Module Replacement..... | 21 |
| LX Driver Board Replacement..... | 24 |
| WARRANTY..... | 25 |

2555 BASKETBALL SCOREBOARD SPECIFICATIONS

GENERAL: This ETL listed scoreboard includes the scoreboard cabinet, mounting hardware, two control consoles, two 10 ft. extension cables, and two junction boxes.

DIMENSIONS: 17 feet L x 5 feet H x 6 inches D (The optional bottom sponsor panel measures 17 feet L x 21 inches H x 6 inches D)

WEIGHT: 225 lbs (The optional bottom sponsor panel weighs 75 lbs)

CONSTRUCTION: The outer frame is made from extruded aluminum. Internal structural parts may be extruded aluminum or formed from aluminum sheet. The face and back are made from aluminum sheet. The face is finished with enamel paint. Black is the standard face color. The captions are white vinyl. The optional bottom sponsor panel is a separate formed piece.

DISPLAY: The 2555 basketball scoreboard displays Guest and Home Scores 0 to 199, Guest and Home Team Fouls 0 to 19, Bonus and Possession Indicators, Guest and Home Time Outs 0 to 9, a 99:59 clock with 1/10th of a second timing below 1:00, and Period 1 to 4. It has an internal horn. The Player Statistics Panels show five lines of information for each team (ten lines total). Each line displays Player Number 0 to 99, Player Fouls 0 to 9, and Player Points 0 to 99.

DIGITS AND SYMBOLS: Light emitting diodes mounted on printed circuit boards form the digits and symbols. The Game Clock uses 12-inch tall red digits, the Guest Scores and Home Scores use 12-inch tall amber digits, the Period uses a 9-inch tall green digit, Bonus symbols are green, Possession symbols and Colon/Decimal symbols are red, the Team Fouls use 9-inch tall amber digits, the Time Outs Left use 9-inch tall red digits. The Player Numbers use 6-inch tall red digits, the Fouls are 6-inch tall green digits, and the Points are 6-inch tall amber digits.

POWER REQUIREMENTS: **Scoreboard** - 120 VAC, 4.3 A, 60 Hz. The scoreboard has an attached 9 ft. power cord. **Control Consoles** - 120 VAC, 0.5 A, 60 Hz each

SCOREBOARD ELECTRONICS: 100% solid state fully enclosed.

CONTROL CONSOLES: Each control console features a microprocessor, 37-key sealed membrane keypad, a LCD display, and an attached 6-foot power cord. The console housing consists of ABS plastic base and top pieces with a steel back plate. One console controls the main scoreboard; the other controls the Player Statics information.

CONTROL CABLES: Each cable has two 22 AWG stranded copper conductors with semi-rigid PVC insulation. It also has a braided shield and a foil shield. The polyethylene jacket is rated at 300 volts. The cable is direct burial rated and measures approximately 1/4 inch in diameter. Two control cables needed for installation. The cable is sold separately from the scoreboard.

JUNCTION BOXES AND EXTENSION CABLES: A 4-1/4-inch x 2-1/4-inch x 2-inch junction box with a 1/4-inch stereo jack mounted on the face plate is attached to each control cable at the point of operation. 10 ft. extension cables connect the control consoles to the junction boxes.

SCORELINK RF MODEM SYSTEM: This accessory can be used in place of control cable and junction box for this scoreboard. Refer to the SCORELINK RF MODEM INSTALLATION MANUAL for more information.

WARRANTY: Five-year limited warranty.

SCOREBOARD INSTALLATION

This part of the manual describes the mechanical and electrical installation of the scoreboard. Figure 1 shows a typical installation of the scoreboard in a gym.

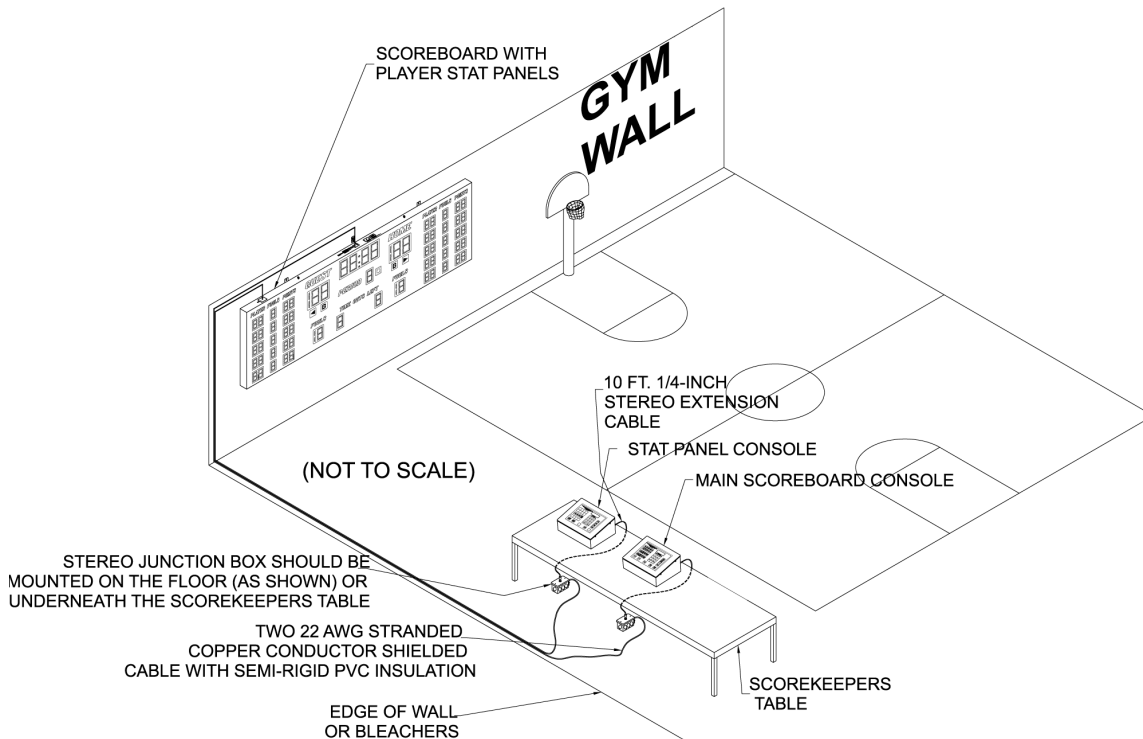


Figure 1 Typical Installation

One of the items listed below must be purchased in order to complete the installation:

- Control cable (length dependent upon installation site layout, but not to exceed 1000 feet between a console and the scoreboard)
- ScoreLink RF Modem System (2 sets required on separate channels)

Items not provided by Electro-Mech Scoreboard Company that are necessary for installation:

- Wall fasteners
- Grounded NEMA 5-15R 120 VAC receptacles for the 2 control consoles at the scorekeeper's table.

Electro-Mech Scoreboard Company performs installations in some areas. In other areas, we can help you contact an independent installer. In areas in which installation service is not available from Electro-Mech Scoreboard Company, we will make every effort to answer your installation questions. Qualified personnel should perform the scoreboard installation. Consult national and local codes before installation.

MECHANICAL INSTALLATION

The mechanical installation includes mounting the scoreboard on the wall and attaching the optional bottom sponsor panel (if purchased) to the scoreboard.

Mounting the Scoreboard

The following steps describe how to mount the scoreboard on the wall:

1. There are two hanger brackets attached to the scoreboard near the top of the cabinet on the rear side. They may have been rotated down to facilitate shipping. Rotate the hanger brackets so that they protrude past the top of the scoreboard and tighten the bolts.
2. Lift the scoreboard to the desired location. There are two eyebolts mounted at the top of the cabinet that can be used to lift the scoreboard into place. **Be sure to mount the center of the scoreboard close enough to the wall receptacle so that you can plug in the 9 ft. power cord.**
3. Insert lag bolts or other suitable fasteners through the hanger brackets and fasten the scoreboard to the wall. Figure 2 shows the mounting point locations for model 2555.

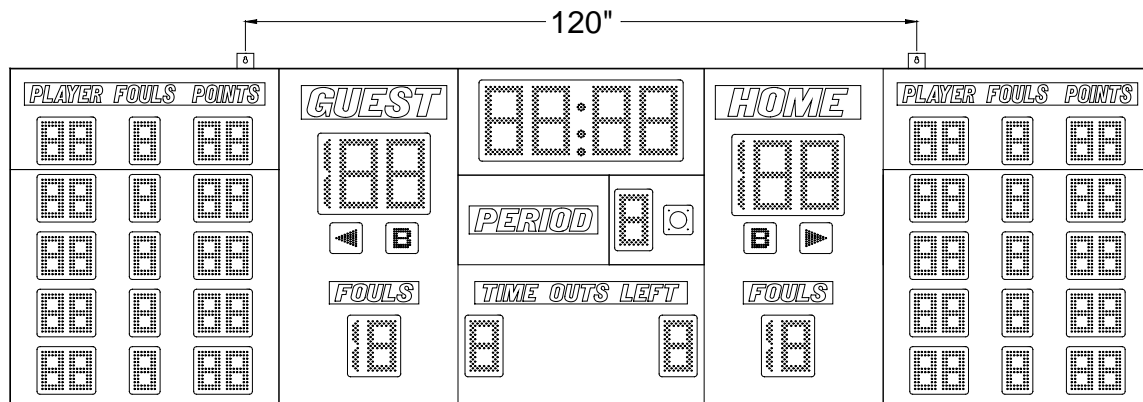


Figure 2 Model 2555 Mounting Points

ELECTRICAL INSTALLATION

We recommend a qualified electrician perform the needed electrical connections to ensure proper operation of the scoreboard. These connections include connecting the scoreboard to a power source, installing the ScoreLink RF Modems or the control cables, and connecting the control consoles. The installation of goal lights and multiple scoreboards at the same site is also described in this section.

Power Connection

The scoreboard requires 120 VAC service at the scoreboard to operate properly. **Maximum power consumption of Model 2555: 520 Watts.** The scoreboard has a 9 ft. attached power cord located at the top of the cabinet. Plug the power cord into a grounded NEMA 5-15R receptacle. The receptacle should be controlled by a separate circuit breaker so that the scoreboard can be turned off without turning off other electrical devices in the facility. Figure 4 shows the electrical connection points on the scoreboard.

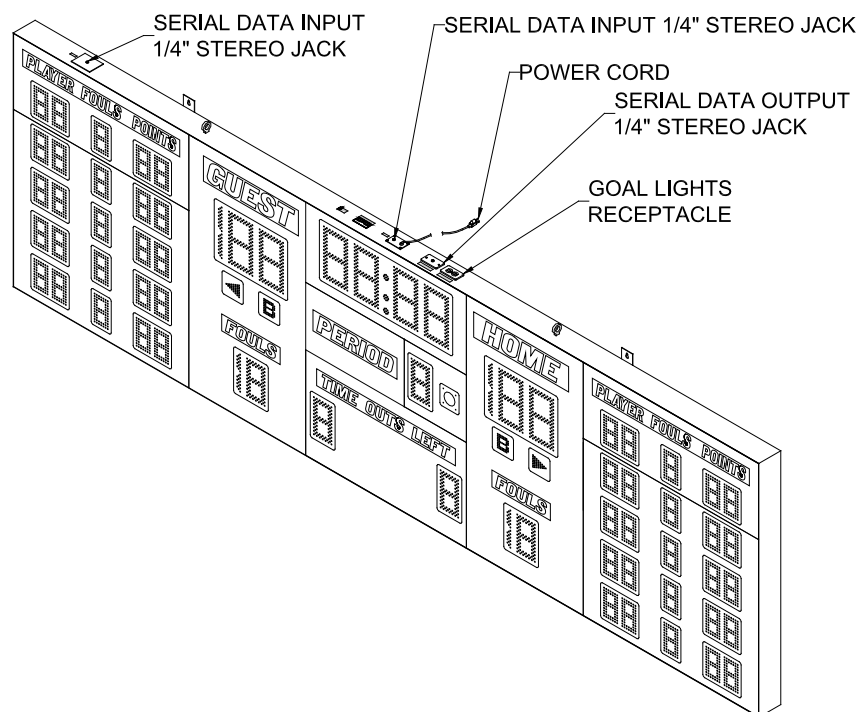



Figure 3 Electrical Connection Points

ScoreLink RF Modem Kit

The SCORELINK RF MODEM SYSTEM is intended to eliminate the control cable between the scoreboard and the control console on indoor Electro-Mech Scoreboard MM and MP series scoreboards. If you have purchased this accessory, disregard the section of this manual titled **Control Cable Installation**. Two sets of transmitters and receivers programmed on different channels are required for this scoreboard. Refer to the installation manual provided for this product.

Control Cable Installation

Two control cables must be installed for this scoreboard. These cables must not be connected together at any point. No cable lengths should exceed 1000 feet. The control cables allow data to be transmitted from the control consoles to the scoreboard. Install one control cable from the SERIAL DATA INPUT 1/4-inch stereo jack on the top of the scoreboard above the GUEST STAT PANEL section (left end of the scoreboard) to within 10 feet of the 2055 control console. Install the second control cable from the SERIAL DATA INPUT 1/4-inch stereo jack on top of the scoreboard above the game clock (middle of the scoreboard) to within 10 feet of the 2550 control console. A small junction box with a 1/4-inch stereo jack mounted on the face plate is attached to each control cable at the point of operation of the scoreboard. These junction boxes should be securely mounted within ten feet of the rear of the control consoles. Most customers order the control cables with the junction boxes attached. Some customers prefer to attach the junction boxes after the cables are installed. Those customers must solder the control cables to the 1/4-inch stereo jacks. Figure 5 shows the control cable wire connection points on the rear of the 1/4-inch stereo jack.

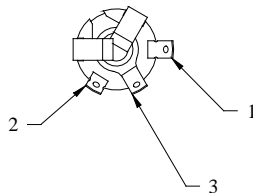

PIN 1 - BLACK WIRE
 PIN 2 - RED WIRE
 PIN 3 - SHIELD WIRE

Figure 4 1/4-inch Stereo Jack Wiring Diagram

A 1/4-inch stereo plug is attached to the scoreboard end of each control cable. The 1/4-inch stereo plugs are inserted into the appropriate SERIAL DATA INPUT 1/4-inch stereo jacks mounted on top of the scoreboard. Most customers order the control cables with the 1/4-inch stereo plugs attached. Some customers prefer to attach them after the cables are installed. Those customers must solder the 1/4-inch stereo plugs to the cables according to the figure 6. Unscrew the stereo plug cover from the plug body to expose the contact pins.

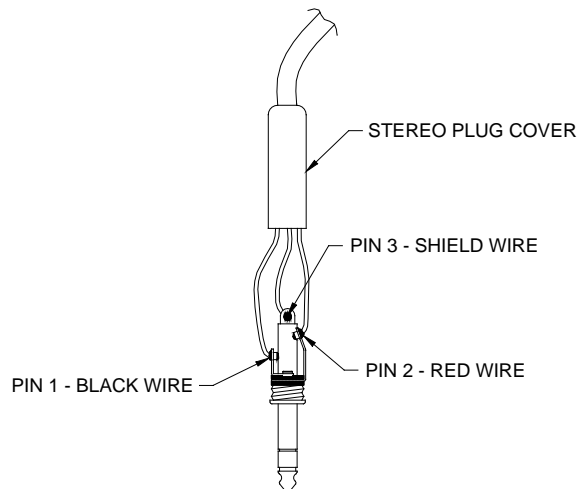


Figure 5 1/4-inch Stereo Plug Wiring Diagram

Control Console Connections

Each 10 ft. extension cable has two molded 1/4-inch stereo plugs attached to it. Two cables are provided to connect the control consoles to the junction boxes. The following steps describe how to connect the control consoles:

1. Plug one end of an extension cable into the 1/4-inch stereo jack on the junction box connected to the control cable for the STAT PANEL section of the scoreboard.
2. Plug the other end into one of the 1/4-inch stereo jacks mounted on the 2055 control console back plate.
3. Plug the 2055 control console power cord into a grounded NEMA 5-15R 120 VAC receptacle.
4. Plug one end of the other extension cable into the 1/4-inch stereo jack on the junction box connected to the control cable for the middle section of the scoreboard.
5. Plug the other end into one of the four 1/4-inch stereo jacks mounted on the 2550 control console back plate.
6. Plug the 2550 control console power cord into a grounded NEMA 5-15R 120 VAC receptacle.

Control Console Safety Warning

This product is equipped with a 3-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.

Goal Lights Installation

This scoreboard can control a set of goal lights. The following steps describe how to install a goal light:

1. Mount the goal light in the desired location.
2. Splice wires (not provided) to the two wire leads of the goal light.
3. Attach a polarized plug to the other end of the wires.
4. Insert the plug into the goal light receptacle on the right side of the scoreboard cabinet. The goal light receptacle is protected by a 1 amp fuse. Do not insert bulbs greater than 40 watts in the goal lights.

Installation of Two or More Scoreboards at the Same Site

The control console that operates the middle section of the scoreboard also can control other Electro-Mech Scoreboard company LED basketball scoreboards. Up to four compatible scoreboards using control cables or an unlimited number of compatible scoreboards by installing a ScoreLink transmitter at the control console and a ScoreLink receiver at each scoreboard. **Never splice the control cables together or connect them to the same junction box.** Each scoreboard will need to be connected to 120 VAC service.

SCOREBOARD OPERATION

SCOREBOARD STARTUP

1. Place the circuit breaker for the scoreboard in the **ON** position.
2. Plug one end of an extension cable into the 1/4-inch stereo jack on the junction box connected to the control cable for the STAT PANEL section of the scoreboard.
3. Plug the other end into one of the 1/4-inch stereo jacks mounted on the 2055 control console back plate.
4. Plug the 2055 control console power cord into a grounded NEMA 5-15R 120 VAC receptacle.
5. Plug one end of an extension cable into the 1/4-inch stereo jack on the junction box connected to the control cable for the middle section of the scoreboard.
6. Plug the other end into one of the four 1/4-inch stereo jacks mounted on the 2550 control console back plate.
7. Plug the 2550 control console power cord into a grounded NEMA 5-15R 120 VAC receptacle.

GAME TIME OPERATION

This scoreboard is operated with two 37-key control consoles. The 2055 control console operates the HOME and GUEST STAT PANEL sections. The 2550 control console operates the middle section of the scoreboard. Figure 7 shows the keypad layout on the 2550 control console.

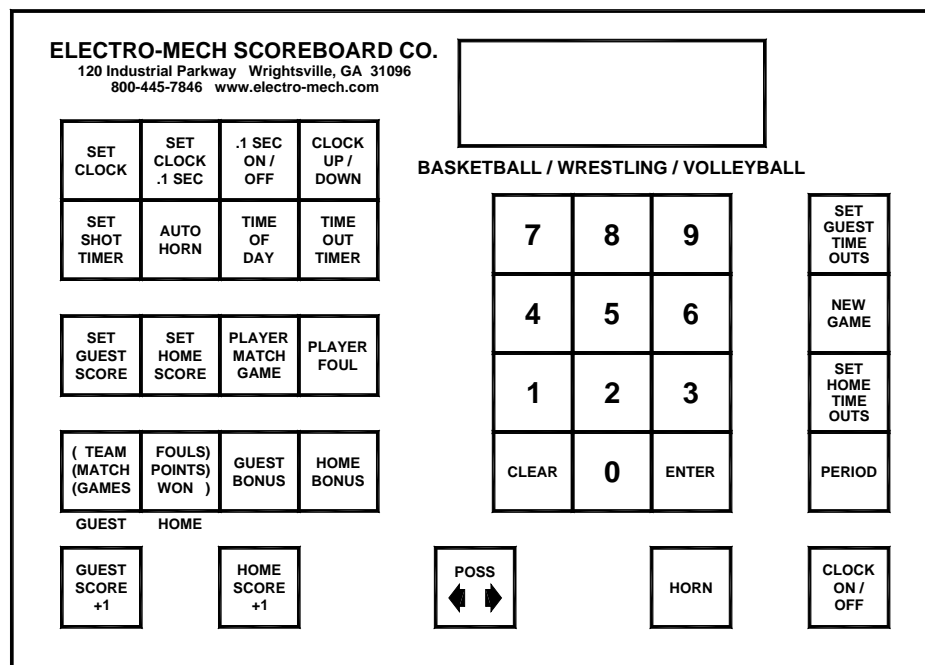


Figure 6 2550 Keypad Layout

Immediately after the control console power cord is plugged into a 120 VAC source, the console LCD display will read:

| |
|------------------|
| ELECTRO-MECH 276 |
| SCOREBOARD MPBWV |

After a few seconds the display will read:

| | | | |
|-----|--------|---|-----|
| 000 | D15:00 | 0 | 000 |
| 00 | 00 | 0 | 00 |

The scoreboard will display:

CLOCK – 15:00
 GUEST SCORE – 0
 HOME SCORE – 0
 HOME TEAM FOULS – 0
 GUEST TEAM FOULS – 0
 HOME TIME OUTS LEFT – 5
 GUEST TIME OUTS LEFT – 5

The control console LCD display shows the same information as the scoreboard. Note: In some functions a 0 will be blanked on the scoreboard, but not on the console LCD display. Because this console program is used for a number of models of scoreboards, some functions will appear on the console LCD display that are not present on the scoreboard. HOME and GUEST TIME OUTS LEFT are not displayed on the console LCD display. Figure 8 explains the LCD display layout.

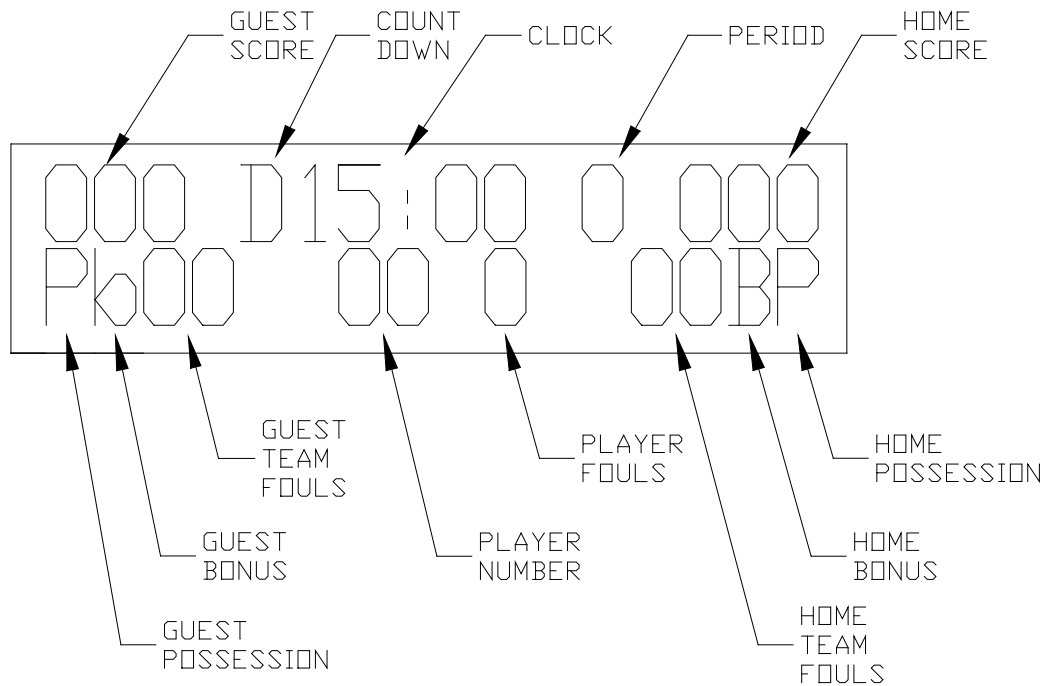


Figure 7 2550 Control Console LCD Display

2550 Control Console Key Functions

1. **SET CLOCK** – This key sets the time displayed on the scoreboard clock. Press [SET CLOCK]. The console LCD display will read:

```
000 D15: 00 0 000
SET CLK <00: 00>
```

Press the keypad numbers for the time, [ENTER].

2. **SET CLOCK .1 SEC** – This key is used to set the scoreboard clock to a time less than one minute when tenth of a second accuracy is required. Press [SET CLOCK .1 SEC]. The console LCD display will read:

```
000 D15: 00 0 000
SET SEC <00. 0>
```

Press the keypad numbers for the time, [ENTER].

3. **.1 SEC ON/OFF** – This key is used to enable or disable the display of tenths of seconds on the scoreboard. The use of this key has a visible effect on the scoreboard only if the game clock is less than one minute. This mode is enabled when the control console is initially turned on or reset. If it is disabled, the LCD display on the control console will still show 1/10th second timing, but the scoreboard will not display it. To turn this function off, press [.1 SEC ON/OFF]. The console LCD display will read:

```
CLOCK   ON   <1>
.1 SEC  OFF  <0>
```

Press [0], [ENTER] on the control console.

4. **CLOCK UP/DOWN** – The clock can be set up to either count up or count down. The control console is set to the clock down mode when it is initially turned on or reset. To make the clock count up, press [CLOCK UP / DOWN]. The console LCD display will read:

```
GAME     UP   <1>
CLOCK    DOWN <0>
```

Press [1], [ENTER] on the control console. The letter D in front of the game time on the console LCD will be replaced with the letter U to indicate that the clock is in the count up mode. To reset the clock to count down mode, press [CLOCK UP / DOWN], [0], [ENTER] on the control console.

5. **SET SHOT TIMER** – The console is programmed with two timers. The timers should be set prior to the start of a game. The shot timer is preset to 25 seconds. The out of bounds timer is preset to 5 seconds. To change either one of these times, press [SET SHOT TIMER]. The console LCD display will read:

```
000 D15: 00 0 000
ST RESET   <25>
```

Press the keypad numbers to set shot timer, [ENTER]. The LCD display will then read:

```
00 D15: 00 0 00
ST OB RESET <05>
```

Press the keypad numbers to set the out of bounds timer, [ENTER].

6. **AUTO HORN** – This key allows the operator to control the end of period horn and the time out horn. The horn sounds for two seconds when the clock reaches 0:00 at the end of the period. The end of period horn can be disabled by pressing [AUTO HORN]. The console LCD display will read:

```
GAME PRESS<1>ON
HORN PRESS<0>OFF
```

Press [0], [ENTER] to disable the horn. The console LCD display will then read:

```
T-0 PRESS<1>ON
HORN PRESS<0>OFF
```

The time out horn is normally disabled. To enable the horn to sound at the end of the time out, press [1], [ENTER] on the control console.

7. **TIME OF DAY** – The time of day can be displayed on the clock section of the scoreboard. **THE GAME CLOCK WILL BE INOPERABLE UNTIL THE TIME OF DAY FUNCTION IS TURNED OFF.** To turn the time of day clock on, press [TIME OF DAY]. The console LCD display will read:

```
TIME OF ON <1>
DAY CLOCK OFF<0>
```

Press [1], [ENTER] on the control console. The console LCD display will then read:

```
00 C12:00 0 00
SET CLK <12:00>
```

Press the keypad numbers for the time, [ENTER]. The letter C will be displayed on the console LCD display to the left of the time to indicate that the time of day function is active. The scoreboard will display the time of day.

8. **TIME OUT TIMER** – To set the Time Out timer, press [TIME OUT TIMER]. The console LCD display will read:

```
000 D15:00 0 000
SET T-0 <1:00>
```

Press the keypad numbers for the time, [ENTER]. After the ENTER key is pressed, the letter T is displayed to the left of the time on the LCD display and the TIME OUT TIMER immediately begins to count down to 0. The scoreboard will not display the Time Out time.

9. **SET GUEST SCORE** – To set the guest score, press [SET GUEST SCORE]. The console LCD display will read:

```
000 D15:00 0 000
GUEST SCORE<000>
```

Press the keypad numbers for the score, [ENTER].

10. **SET HOME SCORE** – To set the home score, press [SET HOME SCORE]. The console LCD display will read:

```
000 D15:00 0 000
HOME SCORE <000>
```

Press the keypad numbers for the score, [ENTER].

11. **GUEST BONUS** – The console is programmed to work with scoreboards with one or two Guest Bonus indicators. This scoreboard only has one Guest Bonus indicator (a green B on the left side of the scoreboard). When the [GUEST BONUS] key is pressed, the Guest Bonus indicator on the scoreboard turns on and 'b' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
b00 00 0 00
```

When the [GUEST BONUS] key is pressed a second time, the Guest Bonus indicator remains illuminated and 'B' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
B00 00 0 00
```

When the [GUEST BONUS] key is pressed a third time, the Guest Bonus indicator is turned off and no symbol is displayed in the Guest Bonus field on the console LCD display.

12. **HOME BONUS** – The console is programmed to work with scoreboards with one or two Home Bonus indicators. This scoreboard only has one Home Bonus indicator (a green B on the right side of the scoreboard). When the [HOME BONUS] key is pressed, the Home Bonus indicator on the scoreboard turns on and 'b' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
00 00 0 00b
```

When the [HOME BONUS] key is pressed a second time, the HOME Bonus indicator remains illuminated and 'B' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
00 00 0 00B
```

When the [HOME BONUS] key is pressed a third time, the HOME Bonus indicator is turned off and no symbol is displayed in the HOME Bonus field on the console LCD display.

13. **(TEAM (MATCH (GAMES GUEST** – This key is used to increment the number of fouls that the guest team has committed.
14. **FOULS) POINTS) WON) HOME** – This key is used to increment the number of fouls that the home team has committed.
15. **GUEST SCORE +1** – This key is used to increment the guest score by 1.
16. **HOME SCORE +1** – This key is used to increment the home score by 1.
17. **POSS** – This key toggles the possession indicators between guest and home. When the [POSS] key is pressed for the first time, the HOME Possession indicator is illuminated (a red triangle on the right side of the scoreboard) and 'P' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
00 00 0 00 P
```

When the [POSS] key is pressed a second time, the HOME Possession indicator turns off, the GUEST Possession indicator turns on (a red triangle on the left side of the scoreboard), and 'P' is displayed on the console LCD display as shown below.

```
000 D15: 00 0 000
P 00 00 0 00
```

18. **HORN** – This key is used to sound the horn for ½ second.

19. **CLOCK ON/OFF** – This key is used to start and stop the clock.
20. **PERIOD** – This key is used to increment the period by 1.
21. **SET HOME TIME OUTS** – This key is used to display the number of time outs that the HOME team has left. To set the time outs left, press [SET HOME TIME OUTS]. The console LCD display will read:

| | | | |
|------|---------|---|-----|
| 000 | D15: 00 | 0 | 000 |
| HOME | TO' S | | <5> |

Press the keypad numbers for the score, [ENTER]. EXAMPLE: To display that the HOME team has 3 time outs left, press [SET HOME TIME OUTS], [3], [ENTER].

22. **NEW GAME** – This key is used to reset all the scoreboard functions in this part of the scoreboard to their default settings. To reset these functions, press [NEW GAME]. The console LCD display will read:

| | |
|------------|--------|
| RESET | YES<1> |
| SCOREBOARD | NO<0> |

Press [1], [ENTER] on the control console. The scoreboard will reset its functions.

23. **SET GUEST TIME OUTS** – This key is used to display the number of time outs that the GUEST team has left. To set the time outs left, press [SET GUEST TIME OUTS]. The console LCD display will read:

| | | | |
|-------|---------|---|-----|
| 000 | D15: 00 | 0 | 000 |
| GUEST | TO' S | | <5> |

Press the keypad numbers for the score, [ENTER].

24. **CLEAR** – This key clears the information being entered into the control console.

The PLAYER MATCH GAME and PLAYER FOUL keys are not used with the 2555 scoreboard.

Horn and Goal Lights Operation

The horn sounds for two seconds when the game clock reaches 0 seconds. It sounds for 0.5 seconds when the [HORN] key on the 2550 control console is pressed. The optional goal lights illuminate when the horn sounds, if installed.

Hand Held Clock Control Unit Operation

The optional hand held clock control unit has an attached cable that is plugged into a jack on the 2550 control console back plate labeled **Clock Hand held**. It has one button that is used to toggle the clock on and off.

Figure 9 shows the keypad layout on the 2055 Player Statistics Panel control console.

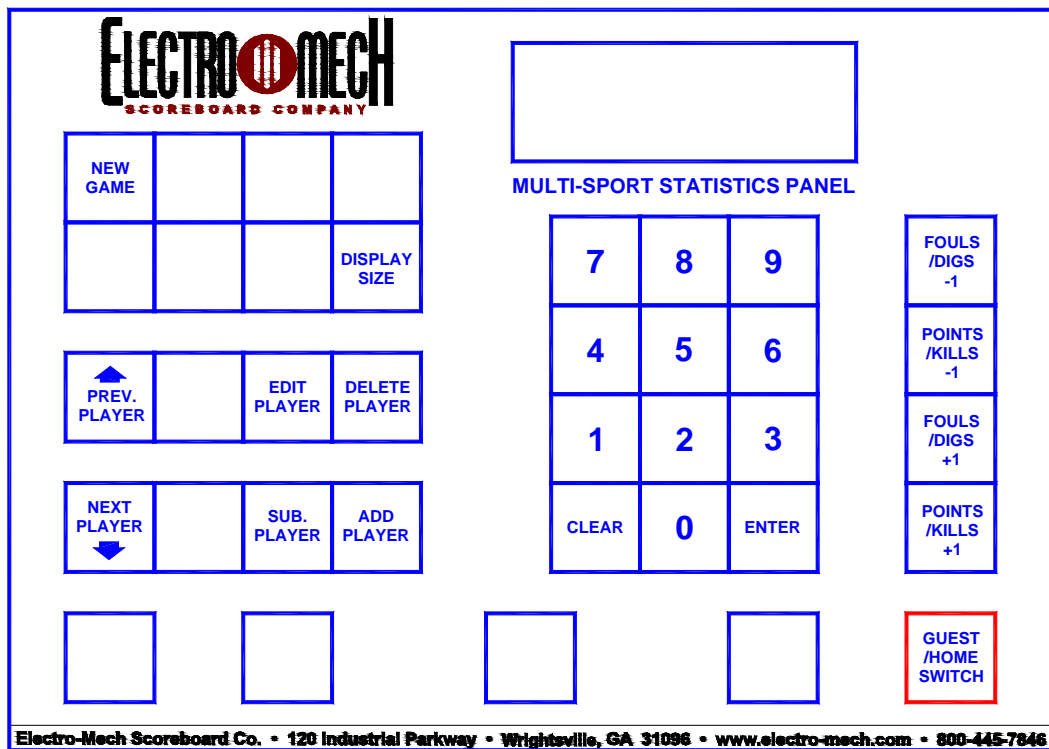


Figure 8 2055 Keypad Layout

Immediately after the control console power cord is plugged into a 120 VAC source, the console LCD display will read:

```
ELECTRO-MECH 803
SCOREBOARD STATP
```

After a few seconds the display will read:

```
SELECT GAME
VBALL=1 BBALL=0
```

Press [1], [ENTER] to play volleyball, [0], [ENTER] to play basketball. If no key is pressed within a few seconds, the console will be in the basketball mode. After a few seconds the display will read:

```
000 00 00 000
GUEST _ _ 00 00
```

Figure 10 explains the LCD display layout.

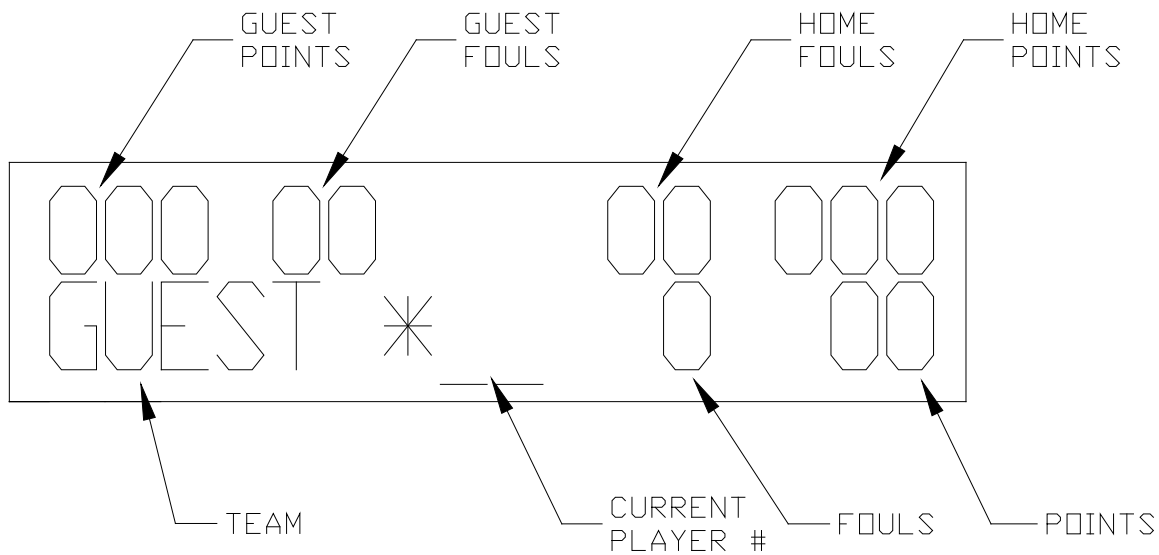


Figure 9 2055 LCD Display

Note: An asterisk is displayed next to the current player number when the player is active.

2055 Control Console Key Functions

1. **NEW GAME** – This key is used to reset all the scoreboard functions to their default settings. To reset the scoreboard, press [NEW GAME]. The console LCD display will read:

```

  RESET   YES<1>
SCOREBOARD NO<0>

```

Press [1], [ENTER] on the control console. The scoreboard will reset its functions.

2. **PREV. PLAYER** ↑ – This key is used to display the previous player in the roster as the CURRENT PLAYER. Each time this key is pressed, the previous player in the roster is shown on the control console LCD display. Note: This list may include players not currently in the game.

3. **EDIT PLAYER** – This key allows the operator to modify the statistics for the current player. Press [EDIT PLAYER]. The console LCD display will read:

```

PLAYER #   <00>
ACTIVE? 1=Y 0=N

```

Press [1], [ENTER] if the current player is active. Press [0], [ENTER], if the current player is not active. The console LCD display will then read:

```

PLAYER #   <00>
FOULS?    <00>

```

Press the keypad number for the number of fouls committed, [ENTER]. The console LCD display will then read:

Press the keypad number for the number of points scored, [ENTER]. Note: In volleyball mode the

```

PLAYER #   <14>
POINTS?    <00>

```

LCD prompts for fouls and points are replaced with prompts for digs and kills.

4. **DELETE PLAYER** – This function is used to delete the current player from the roster. Press [DELETE PLAYER]. The console LCD display will read:

```

PLAYER #   <00>
DELETE? 1=YES

```

Press 1, [ENTER] to delete the current player.

5. **NEXT PLAYER** ↓ – This key is used to display the next player in the roster as the CURRENT PLAYER. Each time this key is pressed, the next player in the roster is shown on the control console LCD display. Note: This list may include players not currently in the game.
6. **SUB. PLAYER** – This key is used to substitute a player currently in the game. To substitute a player, press [SUB. PLAYER]. The console LCD display will read:

```

000 00    00 000
ENTER SUB # <00>

```

Press the keypad numbers for the player entering the game, [ENTER]. The LCD display will then read:

```

000 00    00 000
PLAYER #   <00>

```

Press the keypad numbers for the player leaving the game, [ENTER].

7. **ADD PLAYER** – This function can be used to add players to the roster. Press [ADD PLAYER]. The console LCD display will read:

```

000 00    00 000
PLAYER #   <??>

```

Press the keypad numbers for the player, [ENTER].

8. **GUEST/HOME SWITCH** – This function allows the operator to switch between the Guest and Home team rosters.
9. **POINTS / KILLS +1** – This key is used to increment the number of points / kills scored by the CURRENT PLAYER shown on the console LCD display.

10. **FOULS / DIGS +1** – This key is used to increment the number of fouls / digs committed by the CURRENT PLAYER shown on the console LCD display.
11. **POINTS / KILLS -1** – This key is used to decrement the number of points/ kills scored by the CURRENT PLAYER shown on the console LCD display.
12. **FOULS / DIGS -1** – This key is used to decrement the number of fouls / digs committed by the CURRENT PLAYER shown on the console LCD display.
13. **CLEAR** – This key clears the information being entered into the control console.

The DISPLAY SIZE key is not used with this scoreboard.

You should reset the scoreboard each time that it is turned on. Test out all the functions to ensure that the scoreboard is operating properly.

SCOREBOARD SHUTDOWN

1. Place the power disconnect for the scoreboard in the **OFF** position.
2. Unplug the control consoles power cords.
3. Unplug the extension cables.
4. Store the control consoles in a dry location. These units are not waterproof.

Proper scoreboard shutdown will help protect the scoreboard and control console from power surges and lightning strikes.

SERVICING THE SCOREBOARD

While your scoreboard was designed for years of trouble-free operation, some problems may occasionally occur. Electro-Mech Scoreboard Company offers onsite service in some areas. In other areas, we can help you contact an independent service technician. In areas in which service is not available from Electro-Mech Scoreboard Company, we will make every effort to answer your questions. Our trained personnel at Electro-Mech Scoreboard Company are ready to answer your questions from Monday to Friday during the hours of 8 AM to 5 PM Eastern Standard Time. Be sure to know your scoreboard model number when calling. Scoreboard replacement parts are always available. Damaged parts can usually be repaired at a significant cost savings. Our convenient toll free number is listed at the bottom of every page in this manual.

COMPONENT REPLACEMENT

LED Digits And Indicators Replacement

The LEDs that form digits and indicators are soldered on circuit boards mounted behind metal masks. Do not attempt to replace individual LEDs. In case of a malfunction, the entire LED circuit board must be removed. **To avoid damage to the LED driver module, always turn off the power to the scoreboard when removing or replacing LED digits and indicators.** Figure 11 shows the components of a LED digit assembly. LED indicator assemblies are similar in construction.

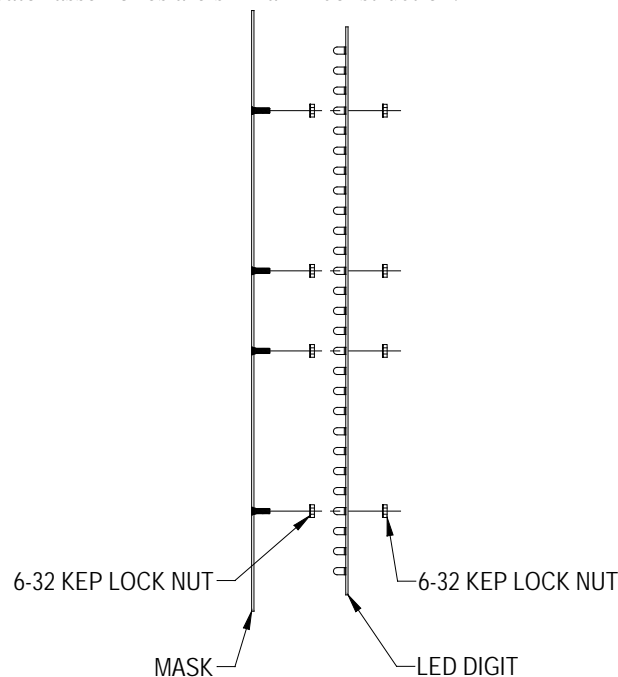



Figure 10 LED Digit Assembly

1. Remove the machine screws that fasten the mask to the face of the scoreboard. **Caution: Support the mask before removing the last screw. The ribbon cable that connects to the rear of the circuit board is not designed to support the weight of the assembly.**
2. Lift the assembly out of the scoreboard and disconnect the ribbon cable from the rear of the circuit board. **Caution: Do not let the cable hang outside of the scoreboard. It is easily cut by sharp metal edges. Damage to the ribbon cable may create short circuit paths that will damage the LED driver module.**
3. Place the assembly on a flat surface and remove the 6-32 kep lock nuts that hold the circuit board in place.


4. Remove the circuit board.
5. Align the mounting holes in the circuit board with the threaded studs on the mask and install the replacement digit on the mask.
6. Plug the ribbon cable onto the header on the back of the circuit board. Refer to figure 12 in order to plug the ribbon cable IDC connector onto the circuit board in the proper orientation.

LED DIGIT HEADER

○ ○ ○ ○ ○
○ ○ ○ ○ ○

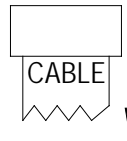

RIBBON CABLE IDC SOCKET

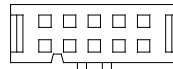

CENTER KEY

CENTER KEY ON RIBBON CABLE IDC SOCKET
MUST POINT IN THE SAME DIRECTION AS THE
ARROW ON THE REAR OF THE LED DIGIT.

Figure 11 LED Digit Ribbon Cable Connection Diagram

Horn Replacement

1. Remove the machine screws that fasten the mask to the face of the scoreboard.
2. Pull the horn assembly out of the scoreboard and cut the two wires leading up to the rear of the horn assembly.
3. Splice the new horn assembly wires to the two wires inside the scoreboard.
4. Install the horn assembly and fasten it to the scoreboard face using the machine screws.

The components that control the middle section of the scoreboard are located behind the PERIOD panel. Figure 13 shows the view behind the PERIOD panel.

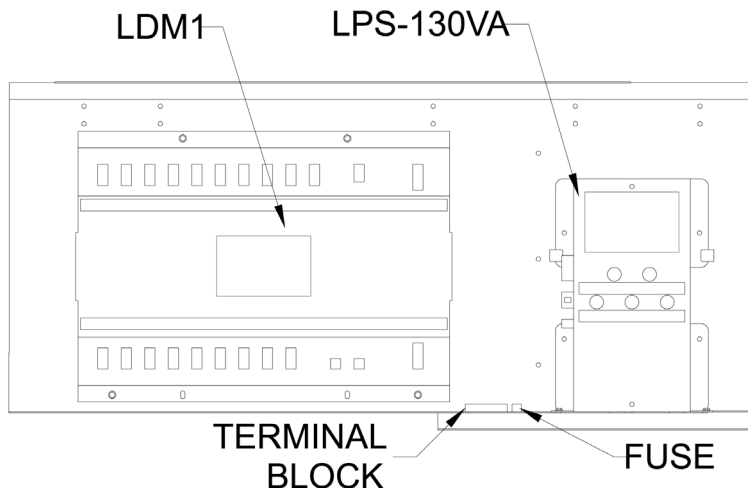


Figure 12 Middle Section Electronics

LDM1 LED DRIVER MODULE FUNCTIONS

| DRIVER MODULE JACK | FUNCTION #1 | FUNCTION #2 | FUNCTION #3 |
|-------------------------------|------------------------------------|---------------------|--------------------|
| J1 | DRIVER MODULE DC POWER INPUT #1 | | |
| J2 | SERIAL DATA INPUT | | |
| J3 | SERIAL DATA OUTPUT | | |
| J4 | CLOCK SECONDS UNITS | | |
| J5 | CLOCK SECONDS TENS | | |
| J6 | CLOCK MINUTES UNITS | | |
| J7 | HOME SCORE UNITS | | |
| J8 | HOME SCORE TENS | HOME SCORE HUNDRED | |
| J9 | GUEST SCORE UNITS | | |
| J10 | HOME FOULS UNITS | HOME FOULS TENS | |
| J11 | GUEST FOULS UNITS | | |
| J13 | DRIVER MODULE DC POWER INPUT #2 | | |
| J14 | HORN / GOAL LIGHT RELAY CONTROL | | |
| J15 | GUEST POSSESSION | GUEST BONUS | DECIMAL / COLON |
| J16 | QUARTER | | |
| J17 | CLOCK MINUTES TENS | | |
| J19 | HOME POSSESSION | HOME BONUS | |
| J20 | GUEST SCORE TENS | GUEST SCORE HUNDRED | |
| J21 | GUEST TIME OUTS LEFT | | |
| J23 | GUEST FOULS TENS | | |
| J24 | HOME TIME OUTS LEFT | | |

LED Driver Module Replacement

Electrical connections to the LED DRIVER MODULE are made with ribbon cable polarized IDC sockets and locking ramp crimp terminal housings that mate with jacks on the module. The module is secured inside the scoreboard with four machine screws.

1. Unplug the electrical connections from the module. Do not cut the plastic tie wraps around the ribbon cables.
2. Remove the four screws.
3. Remove the module from the scoreboard.
4. Insert the replacement module in the scoreboard.
5. Secure the module with the four screws.
6. Insert the plugs into the jacks on the module.

To avoid damage to the module, always turn off the power to the scoreboard when removing or replacing it.

LPS-130VA LED POWER SUPPLY MODULE FUNCTIONS

| JACK | FUNCTION |
|------|---|
| J1 | HORN CONTROL |
| J2 | 16 VDC OUTPUT TO LDM1, HORN RELAY CONTROL |
| J3 | 120 VAC INPUT |

Figure 11 shows the location of the LPS-130VA Power Supply Module fuses. The tables below figure 11 list their functions.

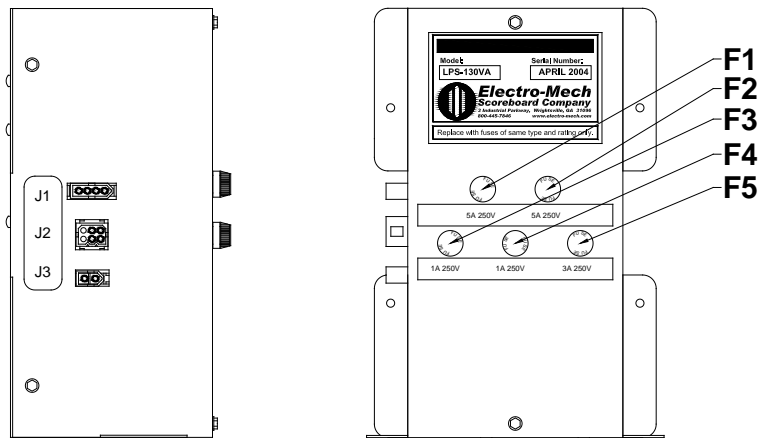


Figure 13 LPS-130VA Power Supply Module

LPS-130VA FUSES

| FUSE | RATING | FUNCTION | BUSSMAN PART # |
|------|----------|---------------------------------|----------------|
| F1 | 10A 250V | DRIVER MODULE DC POWER INPUT #1 | AGC-10 |
| F2 | 10A 250V | DRIVER MODULE DC POWER INPUT #2 | AGC-10 |
| F3 | 1A 250V | GOAL LIGHT RECEPTACLE | AGC-1 |
| F4 | 1A 250V | HORN | AGC-1 |
| F5 | 3A 250V | MAIN AC POWER | AGC-3 |

Note: Other manufacturer's fuses may be substituted for the Bussmann fuses.

LED Power Supply Module Replacement

Electrical connections to the LED POWER SUPPLY MODULE is made with keyed plugs that mate with jacks on the side of the module. The module is secured inside the scoreboard with two machine screws.

1. Disconnect the plugs from the jacks on the module.
2. Remove the two machine screws.
3. Remove the module from the scoreboard.
4. Insert the replacement module in the scoreboard.
5. Secure the module with the four screws.
6. Insert the plugs into the jacks on the side of the module.

To avoid damage to the module, always turn off the power to the scoreboard when removing or replacing it.

The power components are located behind the second row of Player Statistics on each side. To access the power components, remove the LED digit masks on that row as described in the section above. Some Model 2555 scoreboards have power components located behind the top section of each Player Statistics Panel face. Figure 14 on the next page shows the arrangement of the power components.

2055/2056 PLAYER STATISTICS PANEL POWER CHASSIS ASSEMBLY

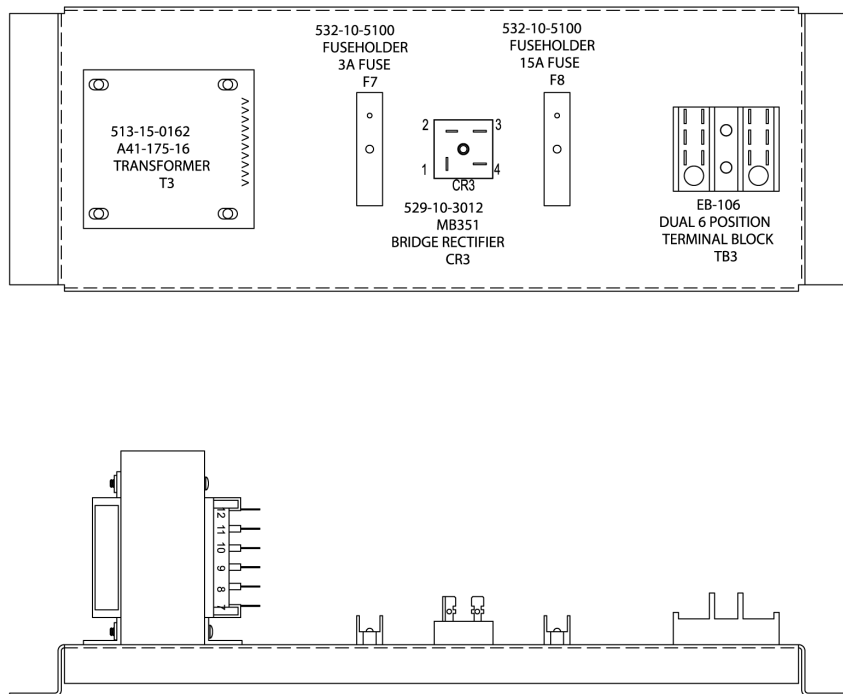


Figure 14 Stat Panel Section Power System

Each row of digits on each side of the player stat panel sections is controlled by its own LX driver board. The driver for each row is located behind the Player Points display on that row. To access the LX drivers, remove the LED digit masks for Player Points as described in the section above. Some Model 2555 scoreboards have the LX drivers mounted on the face panel between the Fouls and Points digits.

LX DRIVER BOARD FUNCTIONS

| DRIVER MODULE JACK | FUNCTION |
|--------------------------|---------------------|
| J3 | DATA OUTPUT |
| J4 | PLAYER NUMBER TENS |
| J5 | PLAYER NUMBER UNITS |
| J7 | DC POWER INPUT |
| J8 | PLAYER FOULS |
| J9 | POINTS TENS |
| J10 | POINTS UNITS |
| SHLD, RED, BLK | DATA INPUT |

LX DRIVER BOARDS

| LX DRIVER | FUNCTION |
|--------------|---------------------|
| LX36 | GUEST TEAM PLAYER 1 |
| LX37 | GUEST TEAM PLAYER 2 |
| LX38 | GUEST TEAM PLAYER 3 |
| LX39 | GUEST TEAM PLAYER 4 |
| LX40 | GUEST TEAM PLAYER 5 |
| LX41 | HOME TEAM PLAYER 1 |
| LX42 | HOME TEAM PLAYER 2 |
| LX43 | HOME TEAM PLAYER 3 |
| LX44 | HOME TEAM PLAYER 4 |
| LX45 | HOME TEAM PLAYER 5 |

LX Driver Board Replacement

Electrical connections to the LX LED DRIVER BOARDS are made with ribbon cable polarized IDC sockets and locking ramp crimp terminal housings that mate with jacks on the circuit board. The circuit board is secured inside the scoreboard on a metal bracket with two hex nuts.

1. Unplug the electrical connections from the circuit board.
2. Remove the two hex nuts.
3. Remove the circuit board from the scoreboard.
4. Insert the replacement circuit board on the metal bracket in the scoreboard.
5. Secure the circuit board with the two hex nuts.
6. Insert the plugs into the jacks on the circuit board.

To avoid damage to the circuit board, always turn off the power to the scoreboard when removing or replacing it.

ELECTRO-MECH SCOREBOARD CO. FIVE YEAR LIMITED WARRANTY

THE ELECTRICAL COMPONENTS OF ALL ELECTRO-MECH SCOREBOARDS ARE GUARANTEED FOR A PERIOD OF FIVE (5) YEARS FROM THE DATE OF INVOICE AGAINST DEFECTS IN WORKMANSHIP OR MATERIAL AND WILL BE REPLACED OR REPAIRED WITHOUT COST TO THE OWNER PROVIDED THE EQUIPMENT OR PARTS ARE RETURNED POSTAGE-PAID TO THE FACTORY IN WRIGHTSVILLE, GA. SHIPPING BACK TO THE OWNER WILL BE VIA UPS GROUND SERVICE EXCEPT WHEN AIR OR SPECIAL METHOD OF RETURN IS SPECIFIED BY THE OWNER, IN WHICH CASE SHIPPING WILL BE FREIGHT COLLECT.

EXCLUDED FROM THIS WARRANTY ARE FUSES.

THIS WARRANTY DOES NOT INCLUDE LABOR CHARGES INCURRED IN THE REMOVAL OF COMPONENT PARTS, SERVICE CALLS, OR DAMAGES RESULTING FROM IMPROPER INSTALLATION, IMPROPER OPERATION, OR PROBLEMS CAUSED BY ANY REPAIR, ALTERATION OR MODIFICATION OF THE SCOREBOARD NOT PERFORMED BY ELECTRO-MECH.

EQUIPMENT WHICH IS SUBJECTED TO ACCIDENT, NEGLECT, ABUSE, MISUSE OR OTHER NATURAL DISASTERS, INCLUDING BUT NOT LIMITED TO FIRE, WIND, LIGHTNING, OR FLOOD, IS NOT COVERED BY THIS GUARANTEE.